

STEP 1



Fully raise the sash.

STEP 2



With your fingertips, grasp the screen pulls and move the screen from right to left.

STEP 3



Remove the screen. Note the spring latches on the left side of the screen.

STEP 4



To replace the screen, align the spring latches with the track and reinsert the screen.