

STEP 1



Unlock the window and raise it up 4 to 5 inches.

STEP 2



Retract the tilt latches at the top of the sash.

STEP 3



Let the sash gently tilt toward you until it rests at approximately a 90-degree angle.

STEP 4



Once the sash is tilted to a 90-degree angle, you can remove it from the main frame.

STEP 5



To replace the sash, hold it at a 90-degree angle and place the pivot bar into the cam lock. Make certain they are securely seated.

STEP 6



Close the sash into the main frame.

STEP 7



Make sure the tilt latches are in the channel.

TIP

To clean both sash of a Double Hung window from inside the home, simply repeat steps 1 through 3, and gently let the sash rest on the casing of the window.

